



New Ways Of Thinking To Solve Old Problems.®

Oregon Aero® BLSS® Kit Model 45 Part Nos. 95045-4 & 95045-6

Each Kit Contains:

- 1 - Round Crown Pad
- 4 - Oval Pads
- 2 - Trapezoidal Pads
- 4 - Nylon Brackets
- 1 - Chin/Nape Strap Webbing System
- 15 - Self-Adhesive Hook Fastener Strips
- 6 - Alcohol Cleaning Swabs



INSTALLATION INSTRUCTIONS

1. Place the helmet upside down on a work surface and remove the interior webbing by removing the screws and nut plates around the circumference of the helmet.
2. Clean the interior of the helmet with the Alcohol Cleaning Swabs (included with **BLSS**® Kit) and allow surface to dry.
3. Attach Self-Adhesive Hook Fastener strips to the top and side inner surfaces of the helmet as illustrated in Figure 1.
4. Weave a Nylon Bracket through each of the four buckles on the Chin/Nape Strap Webbing System as shown in Figure 2. Align the holes in the Nylon Bracket with each other.
5. Lay Chin/Nape Strap Webbing System with the Nape Strap toward the back of the helmet with buckle side up as shown in Figure 3.



Figure 1

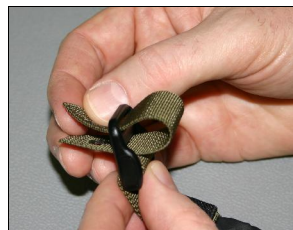


Figure 2



Figure 3

Oregon Aero, Inc.

34020 Skyway Drive, Scappoose, OR 97056-2516
www.OregonAero.com
customerservice@oregonaero.com

Phone: 800.888.6910
503.543.7399
Fax: 503.543.4820

Oregon Aero® BLSS® Kit Model 45

Part Nos. 95045-4 & 95045-6

6. Attach Nylon Brackets to helmet by threading the nut plates through the hole in the Nylon Bracket and attaching it to the screw in the helmet as shown in Figure 4. Select hole in Nylon Bracket that will position buckle outside of helmet shell but near rim. Tighten all four screws.

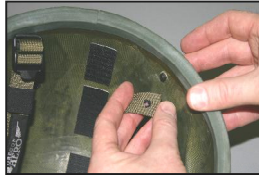


Figure 4

7. Install the seven pads as shown in Figure 5. Only the green side of each pad will adhere to the Self-Adhesive Hook Fastener Strips. The large, round Crown Pad attaches to the crown of the helmet. Attach the two Trapezoidal Pads to the front and back of the helmet with the narrow end pointed toward the crown of the helmet. Attach the four Oval Pads lengthwise to the Self-Adhesive Hook Fastener strips on the sides of the helmet.



Figure 5

Cleaning:

Clean pads by hand washing with mild soap and rinsing completely. Lay flat to dry. Never place in clothes dryer.

If you have a question about installation, please contact Oregon Aero Customer Service at 800-888-6910 between 7 a.m. and 5 p.m. PT. Replacement parts may be ordered from Oregon Aero.

SATISFACTION GUARANTEE

If you are not satisfied with your Oregon Aero, Inc. product for any reason, return it to the place of purchase within 30 days of purchase, in good condition and with the receipt, for a full refund or exchange.

LIMITED WARRANTY

This product is backed by a limited warranty against defects in manufacture for a period of two years from the date of purchase. In the event we receive the return of this product within the warranty period, and we agree that the same is defective, our sole obligation shall be to replace such product at no charge. We disclaim all other express or implied warranties, including any implied warranty of merchantability or fitness for a particular use. Some states do not permit the limitation of implied warranties, so this information may not apply to you.

BLSS® is a Registered Trademark of Oregon Aero, Inc.

PKG-IN-031 11/06

Oregon Aero, Inc.

34020 Skyway Drive, Scappoose, OR 97056-2516
www.OregonAero.com
customerservice@oregonaero.com

Phone: 800.888.6910
503.543.7399
Fax: 503.543.4820