



New Ways Of Thinking To Solve Old Problems.®

The Oregon Aero® BLU® Kit (Ballistic Liner Upgrade Kit)

Each kit contains one round crown pad, four oval pads, two trapezoidal pads and self-adhesive hook fastener strips.

INSTALLATION INSTRUCTIONS

1. Remove the original suspension system from your helmet, saving all screws and nuts.
2. Clean inner surface of helmet with rubbing alcohol.
3. Attach self-adhesive hook strips to inner surface at positions illustrated in **Figure 1**.
4. Install the seven pads supplied with the kit. Only the green side of each pad will adhere to the hook-fastening strips. The large, round pad attaches to the crown of the helmet. The two trapezoidal pads attach to the front and back of the helmet with the narrow end pointed toward the crown of the helmet. Attach the four oval pads lengthwise to the hook-fastening strips on the sides of the helmet (see **Figure 2** for positioning of pads).
5. Replace the chin/nape system and all screws and nuts.
6. Place the straps for the camo cover over the hook fastening strips to hold the camo cover secure and attach the pads over the camo cover straps and hook fastening strips.

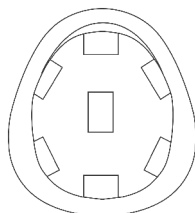


Figure 1

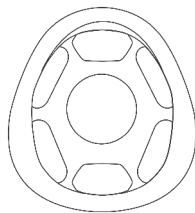


Figure 2

PLEASE NOTE: In cold weather, use hands or place helmet on knee to pre-warm pads.

Cleaning

Clean pads by hand washing with mild soap and rinsing completely. Lay flat to dry. Never place in clothes dryer.

Safer • Painless • Stable • Moisture and Waterproof • Gas Permeable • Self-wicking • Quieter • Positively Buoyant

SATISFACTION GUARANTEE

If you are not satisfied with your Oregon Aero, Inc. product for any reason, return it to the place of purchase within 30 days of purchase, in good condition and with the receipt, for a full refund or exchange.

LIMITED WARRANTY

This product is backed by a limited warranty against defects in manufacture for a period of two years from the date of purchase. In the event we receive the return of this product within the warranty period, and we agree that the same is defective, our sole obligation shall be to replace such product at no charge. We disclaim all other express or implied warranties, including any implied warranty of merchantability or fitness for a particular use. Some states do not permit the limitation of implied warranties, so this information may not apply to you.

BLU® is a Registered Trademark of Oregon Aero, Inc.
Covered by U.S. Patent No. 6,467,099 B2. Other patent coverage pending.

PKG-IN-005 Rev. 10/06

Oregon Aero, Inc.

34020 Skyway Drive, Scappoose, OR 97056-2516

www.OregonAero.com

customerservice@oregonaero.com

Phone: 800.888.6910

503.543.7399

Fax: 503.543.4820



New Ways Of Thinking To Solve Old Problems.®

The Oregon Aero® BLU® Kit (Ballistic Liner Upgrade Kit)

Each kit contains one round crown pad, four oval pads, two trapezoidal pads and self-adhesive hook fastener strips.

INSTALLATION INSTRUCTIONS

1. Remove the original suspension system from your helmet, saving all screws and nuts.
2. Clean inner surface of helmet with rubbing alcohol.
3. Attach self-adhesive hook strips to inner surface at positions illustrated in **Figure 1**.
4. Install the seven pads supplied with the kit. Only the green side of each pad will adhere to the hook-fastening strips. The large, round pad attaches to the crown of the helmet. The two trapezoidal pads attach to the front and back of the helmet with the narrow end pointed toward the crown of the helmet. Attach the four oval pads lengthwise to the hook-fastening strips on the sides of the helmet (see **Figure 2** for positioning of pads).
5. Replace the chin/nape system and all screws and nuts.
6. Place the straps for the camo cover over the hook fastening strips to hold the camo cover secure and attach the pads over the camo cover straps and hook fastening strips.

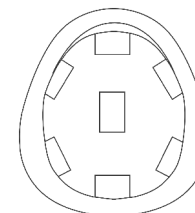


Figure 1

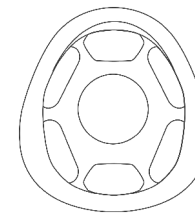


Figure 2

PLEASE NOTE: In cold weather, use hands or place helmet on knee to pre-warm pads.

Cleaning

Clean pads by hand washing with mild soap and rinsing completely. Lay flat to dry. Never place in clothes dryer.

Safer • Painless • Stable • Moisture and Waterproof • Gas Permeable • Self-wicking • Quieter • Positively Buoyant

SATISFACTION GUARANTEE

If you are not satisfied with your Oregon Aero, Inc. product for any reason, return it to the place of purchase within 30 days of purchase, in good condition and with the receipt, for a full refund or exchange.

LIMITED WARRANTY

This product is backed by a limited warranty against defects in manufacture for a period of two years from the date of purchase. In the event we receive the return of this product within the warranty period, and we agree that the same is defective, our sole obligation shall be to replace such product at no charge. We disclaim all other express or implied warranties, including any implied warranty of merchantability or fitness for a particular use. Some states do not permit the limitation of implied warranties, so this information may not apply to you.

BLU® is a Registered Trademark of Oregon Aero, Inc.
Covered by U.S. Patent No. 6,467,099 B2. Other patent coverage pending.

PKG-IN-005 Rev. 10/06

Oregon Aero, Inc.

34020 Skyway Drive, Scappoose, OR 97056-2516

www.OregonAero.com

customerservice@oregonaero.com

Phone: 800.888.6910

503.543.7399

Fax: 503.543.4820