



New Ways Of Thinking To Solve Old Problems.™

**The Oregon Aero® BLU® Kit
(Ballistic Liner Upgrade Kit)
Part Nos. 95080-(X)-GE2**

Each kit contains two long oval pads, four shorter oval pads, and two trapezoidal pads.

INSTALLATION INSTRUCTIONS

1. Remove the original pads from your helmet.
2. Install the eight pads supplied with the kit. Only the green side of each pad will adhere to the existing hook fastening strips. The two long oval pads attach to the crown of the helmet. The two long oval pads attach to the crown of the helmet. The two trapezoidal pads attach to the front and back of the helmet with the narrow end pointed toward the crown of the helmet. Attach the remaining four oval pads lengthwise to the hook fastening strips on the sides of the helmet (see Figure 1 for positioning of pads).

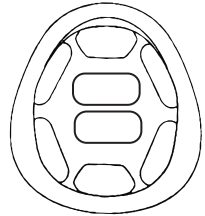


Figure 1

PLEASE NOTE: In cold weather use hands or place helmet on knee to pre-warm pads. When wearing a gas mask or other headgear under the helmet, re-arrange the pads to prevent the helmet from pressing on the gas mask hardware.

CLEANING

Clean pads by hand washing with mild soap and rinsing completely. Lay flat to dry. Never place in clothes dryer.



PKG-IN-053 REV 04142026

Oregon Aero, Inc.

34020 Skyway Drive, Scappoose OR 97056-2516
www.OregonAero.com
customerservice@oregonaero.com

Phone: 800-888-6910
503-543-7399
Fax: 503-543-4820