


Aerospace Products For Down to Earth Comfort®

Oregon Aero® SoftSeal® Ear Cushions Part Numbers: 20050, 20025

Installation Instructions

- 1. Remove original ear seals from ear cups making sure the plastic ear cup flange is clean. Use a paper towel and glass cleaner to remove any surface residue.
- Apply the enclosed crescent-shaped adhesives to the flat surface of the plastic ear cup (Figure 1). Do not remove the brown protective backing from the adhesives yet. After installing two of the adhesives on each ear cup, install the SoftSeal Ear Cushions by stretching ear seal flange over the ear cup. Check the alignment of ear seal to ear cup.
- Carefully reach inside each SoftSeal Ear Cusion using needle-nose pliers or tweezers
 and remove brown adhesive backing (Figure 2). When both pieces of brown backing
 have been removed, press the ear seal firmly onto the ear cup to achieve proper
 adhesion.

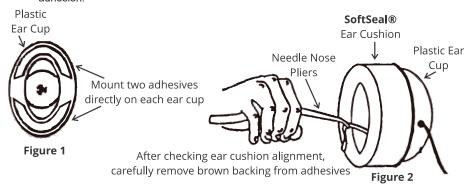

Satisfaction Guarantee

If you are not satisfied with your Oregon Aero product for any reason, you have 30 calendar days to return the product from the date you purchased it for a full refund or exchange. To be eligible, product must be in good condition and include the receipt.

Limited Warranty

This product is backed by a limited warranty against defects in manufacture for a period of two years from the date of purchase. In the event we receive the return of this product within the warranty period, and we agree that the product is defective, our sole obligation shall be to replace the product at no charge. We disclaim all other express or implied warranties, including any implied warranty of merchantability or fitness for a particular use. Some states do not permit the limitation of implied warranties, so this information may not apply to you.

SoftSeal® is a registered trademark of Oregon Aero, Inc.

PKG-IN-011 Rev. 12192016

Phone: 800-888-6910

Fax: 503-543-4820

Made in the U.S.A.

503-543-7399